




## LOADING FIRMWARE UPDATES INTO YOUR POWER ANALYZER OR ORACLE

- 1) Download and unzip the latest firmware file for you device.
- 2) Connect your Power Analyzer or Oracle device to your computer using the USB interface.
- 3) Start PowerPROview. If it does not automatically connect to your device click on the connect button  on the Real-Time toolbar.
- 4) Go to the menu at the top and click on Update and then on the menu item "Update Analyzer Firmware" or "Update Oracle Firmware" (depending upon your device).
- 4a) Or click on the Update button  on the tool bar to open the Firmware Update window:



- 5) Click on "Import Firmware File" and browse to the location that you unzipped the new file into. Select the new file and click on Open.

6) The new version will now be shown in the “Available Versions” list. Click on the new version to select it and then click on “Load”. The new firmware will then be sent to the device and you will see a progress indicator:

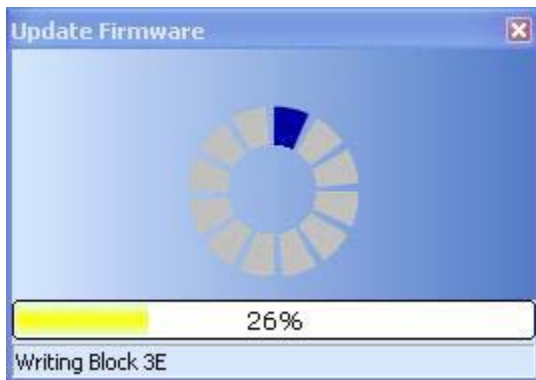


7) When the update is done:



Click on Ok and the device will reboot.

8) After the reboot is complete you have the option to view the latest revision info:

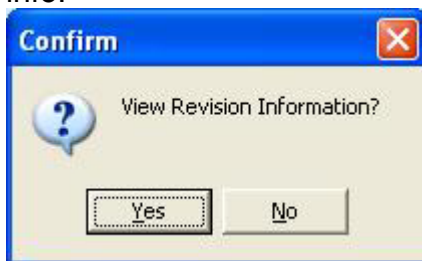

9) Your device now has the latest firmware installed.